


注意事项

1. 请远离强磁场、高温、潮湿等环境。

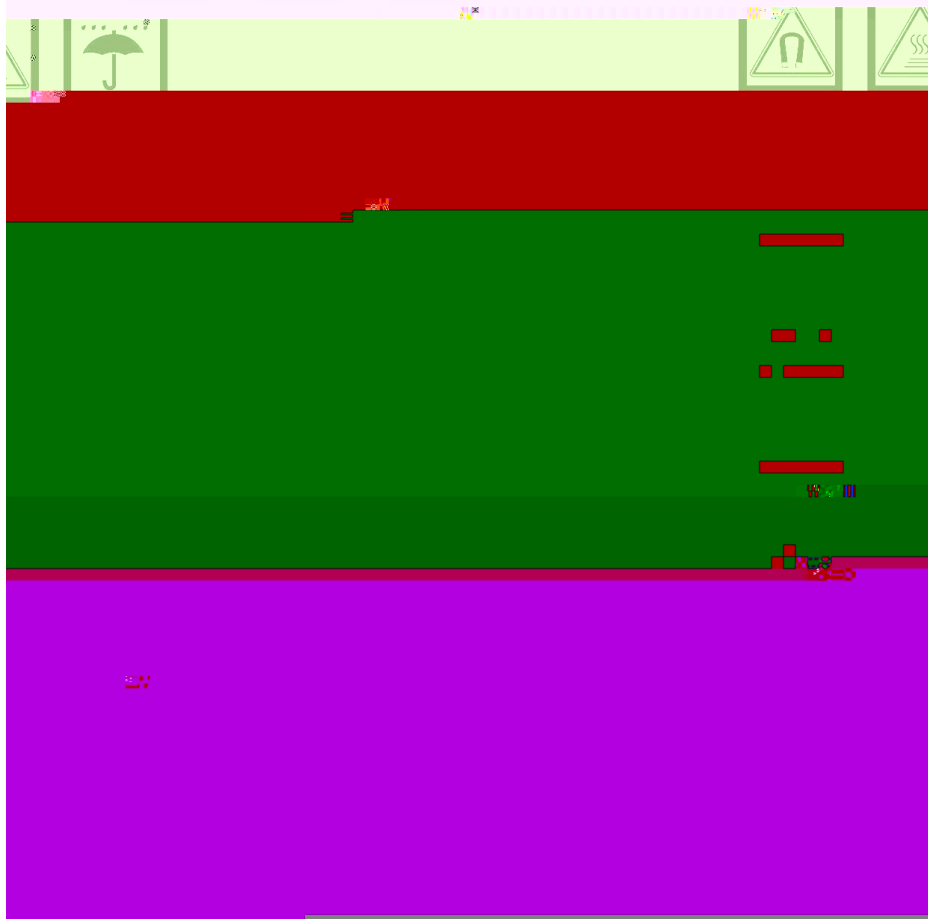

1.1		1
1.2		1
2.1		2
2.2		3
2.3		4
3.1		5
3.2		6
3.3		7
4.1		9
4.2		9
4.3		9
4.3.1		9
4.3.2	PC	11
4.3.3		11
4.4		12
4.4.1		12
4.4.2		12
4.4.3		12
4.4.4		13
4.4.5		13
4.4.6		14
4.4.7		14
5.1		15

5.2 15

5.3 16

6.1 17

6.2 17

6.3 18

6.4 18

6.5 19

6.6 22

6.7 24

6.8 25

6.9 25

6.10 26

•

99% 1


Android 6.0.1	CPU	A64 4	1.5GHz	
1GB DDR3		8GB eMMC	TF	128GB
10000				


DC 24V	≤ 200mA
≤ 300mA	-25 +70
	≤ 95%


CMOS	200W
123°	3.5mm
	0 lux

LCD	7"
600×1024	

(W/H/D) 148.5×363×47 mm

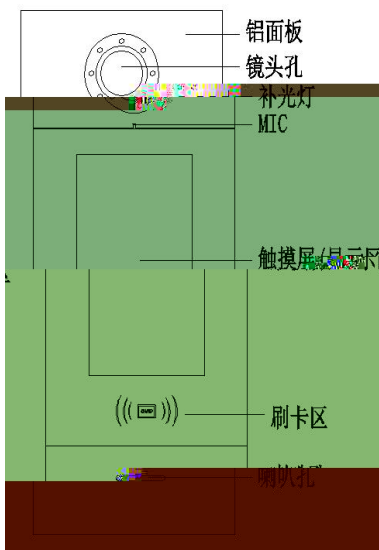

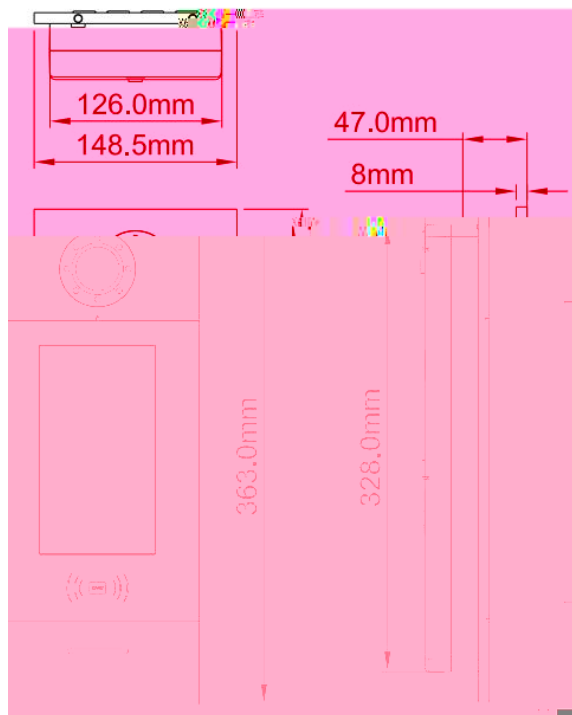

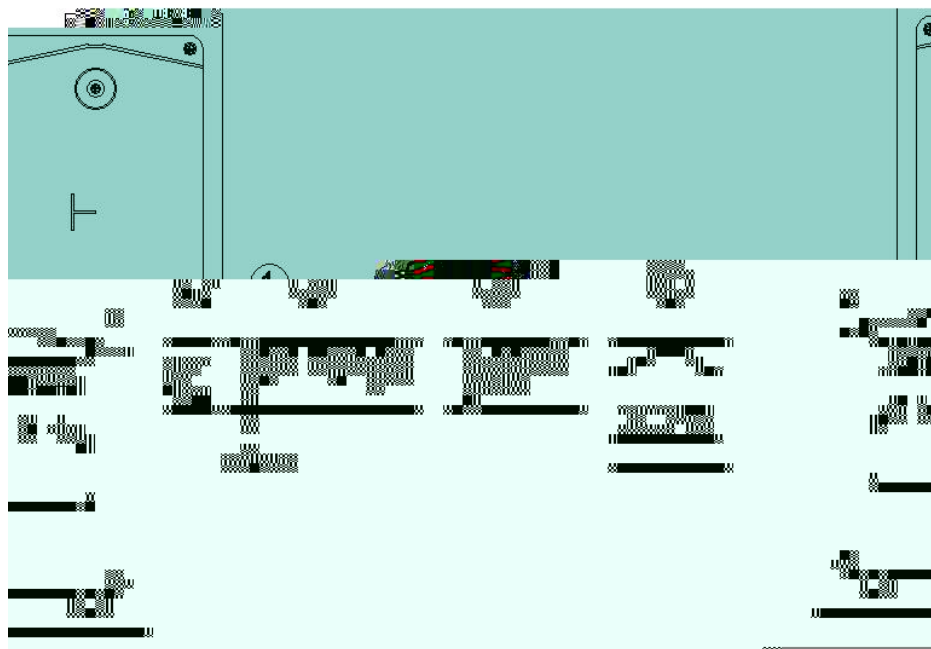

DC 24V

DC 18-30V

+12V

>18V

+12V

COM NO NC

GS



UNLOCK GND

WG-GND WG-D0 WG-D1

DA DB 485



2

W/H/D 1

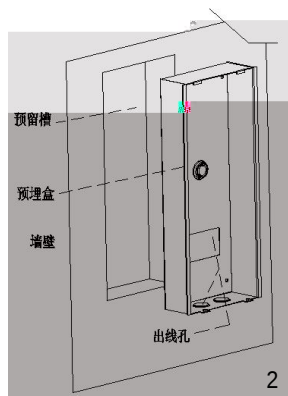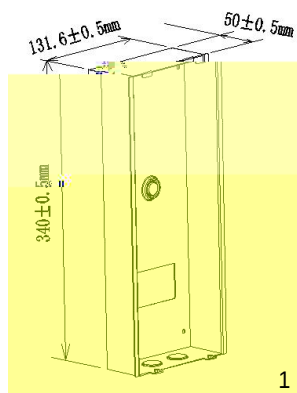


3

4

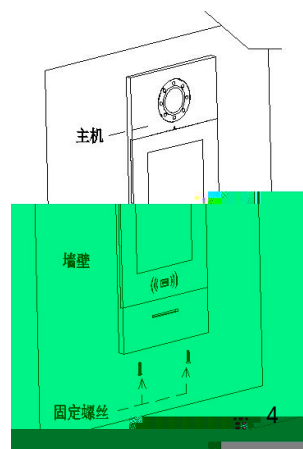
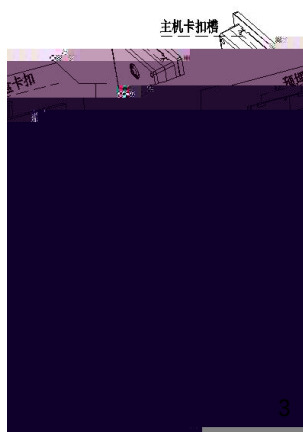


5

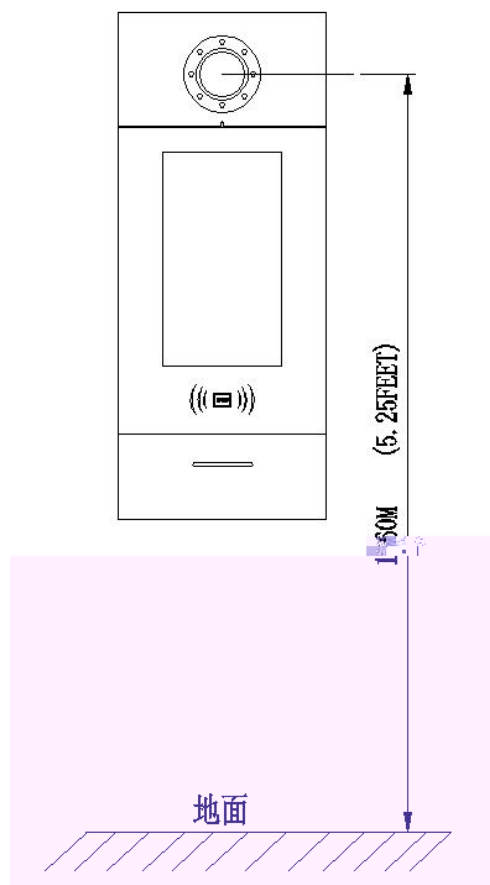

1.6

●

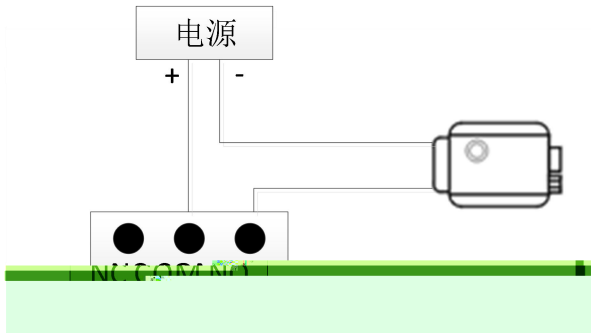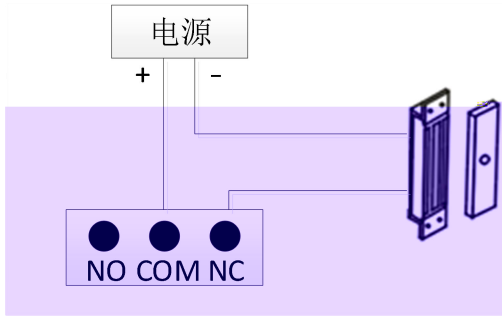

800mA

●



常开型

山崎電機



●



1. GS
2. “ -> -> ”

V1.07



5s

30s




PC



2

1

1

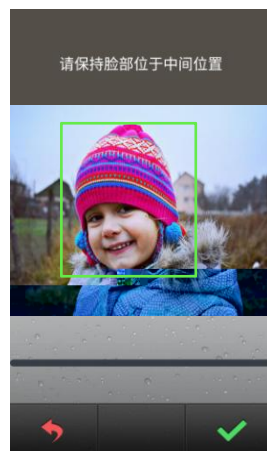

2

“0000”

“801801”

“0000”




2

PC

PC





PC

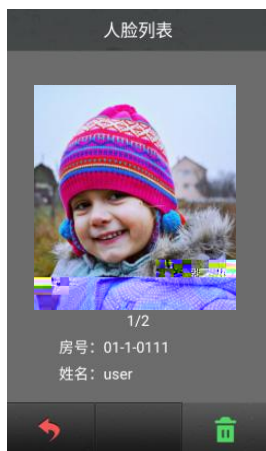

PC

PC

1

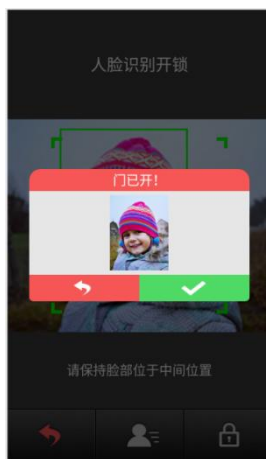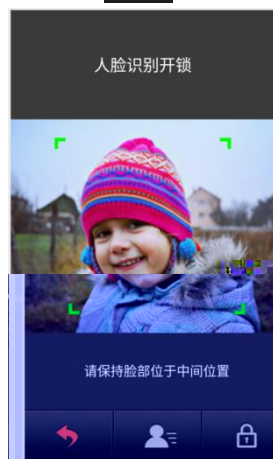

2

3



1



2

APP




1



2

APP

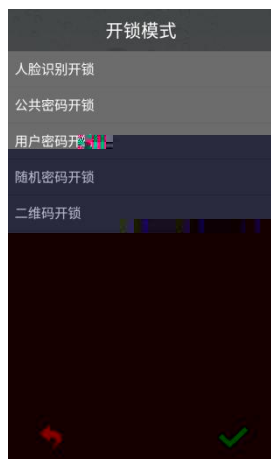

1



2

请输入房号和密码

房号: _____

密码: _____

1	2	3
4	5	6
7	8	9
0	*	#

0000

3

1 1 101 1 1

101 666666

1



2


请输入公共密码


密码: _____

1	2	3
4	5	6
7	8	9
×	0	✓
↶	📝	🗑️

3

666666

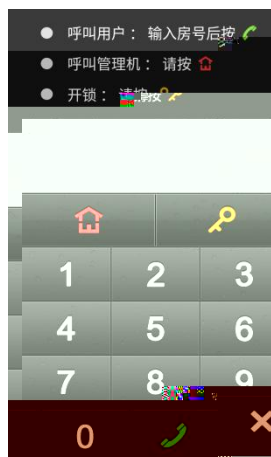

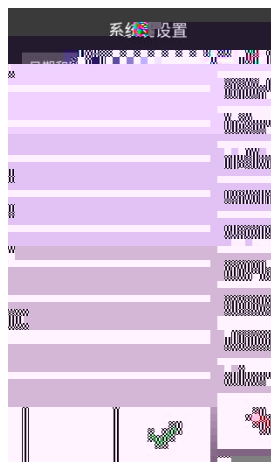



声音设置

回铃音量调节

通话音量调节

门状态报警音开关

其他音开关

←

✓



时间和日期

年: 2019

月: 1

日: 4

时: 5

分: 8

秒: 24

←

✓



●

“

”


“

”



●

“.”

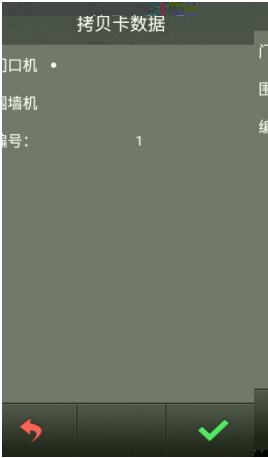

●

IC

IC

IC





“ ”



(

“ ”



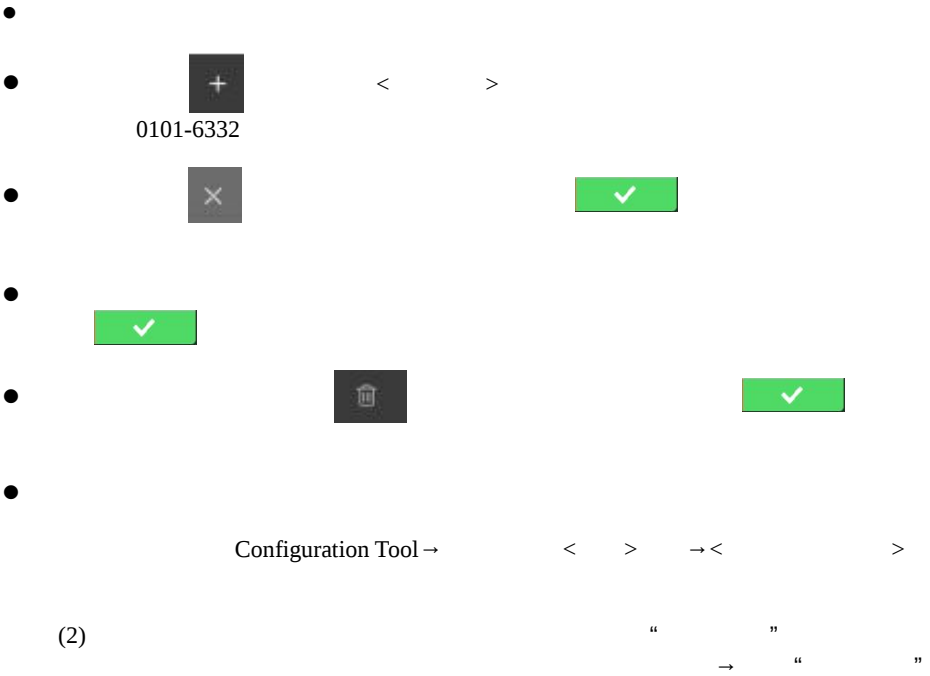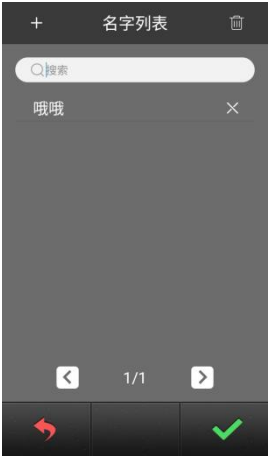

(3) “ ” Excel

→ “ ”

“ ”



开锁持续时间设置


原持续时间: 30

请输入新持续时间



-8—64 0

-8—64 0

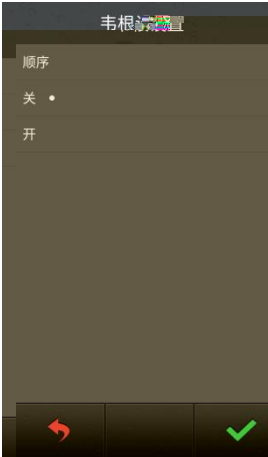





3

4

3

4

818

8

18

1808

18

08

室内机拨号位数设置

3位

4位 •

←

✓

3 4

室内机拨号位数设置

3位

4位 •

←

✓

1 2 3

单元拨号位数设置

1位

2位

3位 •



←

✓

	1	2	3
	1 0	1 +1	2 +1

	3	4
	1 +2	2 +2

PC

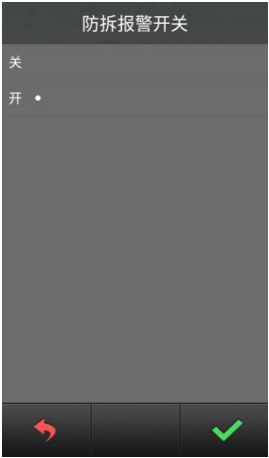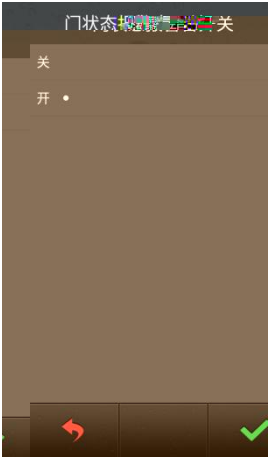

“.”

1-99

1-32

设备属性

设备类型：
门口机 •
围墙机 •

编号： 01

← ✓



1-9

1- 10

设备属性

设备类型：
门口机 •
围墙机 •

栋号： 1

单元号： 1

编号： 5

← ✓



人脸识别设置

活体检测开关

单户人脸数设置

阈值设置

← ✓

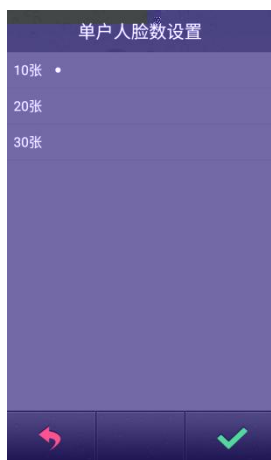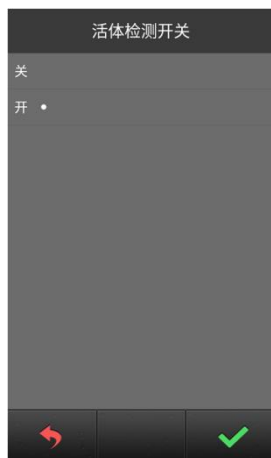

10 20 30



阈值设置

低

中 •

高

←

✓

6

工程密码修改

请输入旧密码：

新密码：

确认新密码：

←

✓



IP

MAC





1

2

1

2 APP

10 IP

3 APP