

Z13



Z13

_V1.0

A-IS07

化学药品

三、预防措施



3、不要使用湿布



2.1

2.2

2.3

2.4

3.1

3.1.1

3.1.2

3.1.3

3.1.4

3.1.5

3.1.6

3.1.7

3.2

3.2.1

3.2.2

3.2.3

3.2.4

3.2.5

3.2.6

3.2.7

3.2.8

3.2.9

3.2.10

3.2.11

3.2.12

3.3

3.3.1

3.3.2

3.3.3

3.3.4

3.3.5

3.3.6

3.3.7

3.3.8

3.3.9

3.3.10

3.3.11

3.3.12

3.3.13

3.3.14

3.3.15

3.3.16

3.3.17

4.1

4.2

5.1

5.1.1


5.1.2

5.2


5.3




2.1

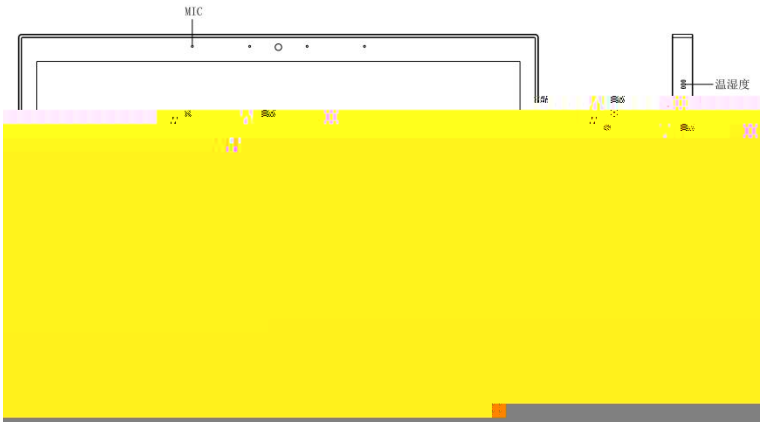


2.2

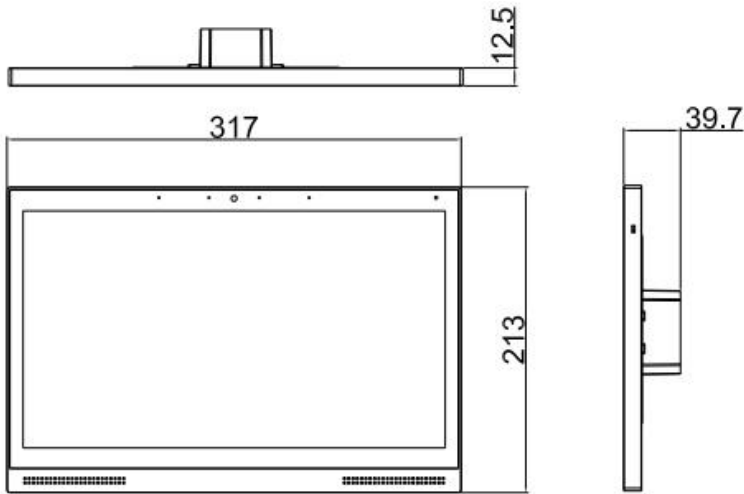


2.3

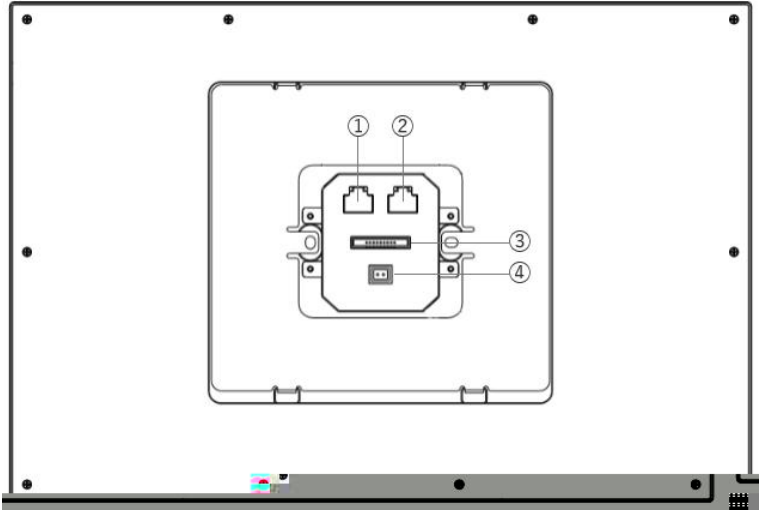

2.4

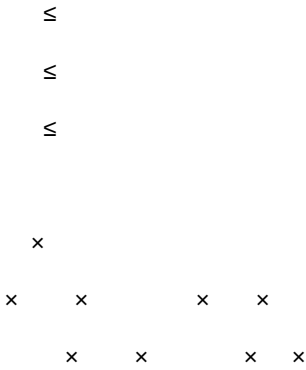

3.1

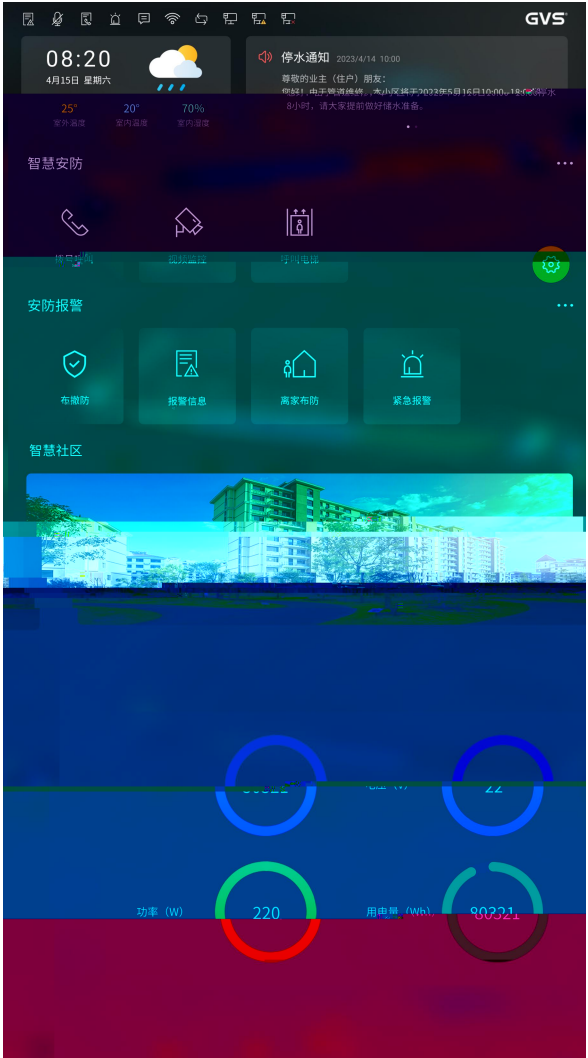


×


3.1.1



3.1.2



3.1.3



3.1.4



3.1.5



3.1.6




3.1.7




3.2



3.2.1

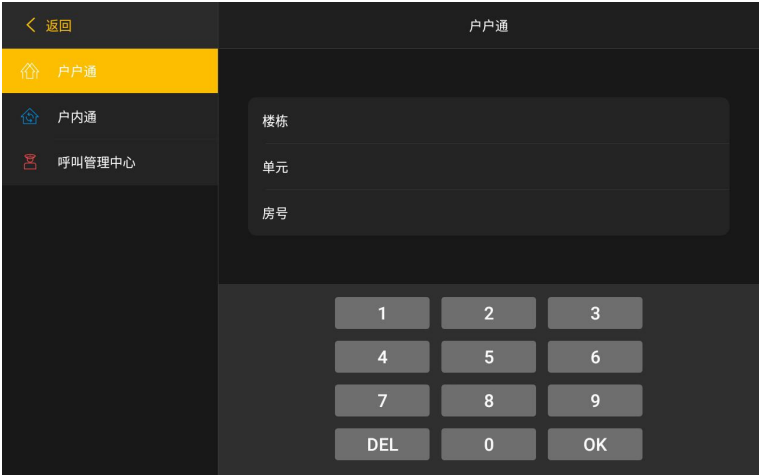

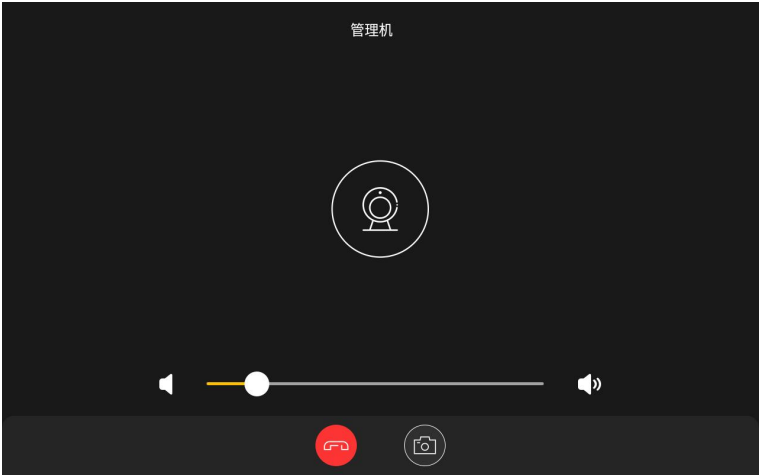

①







②

③


④




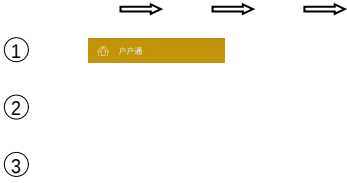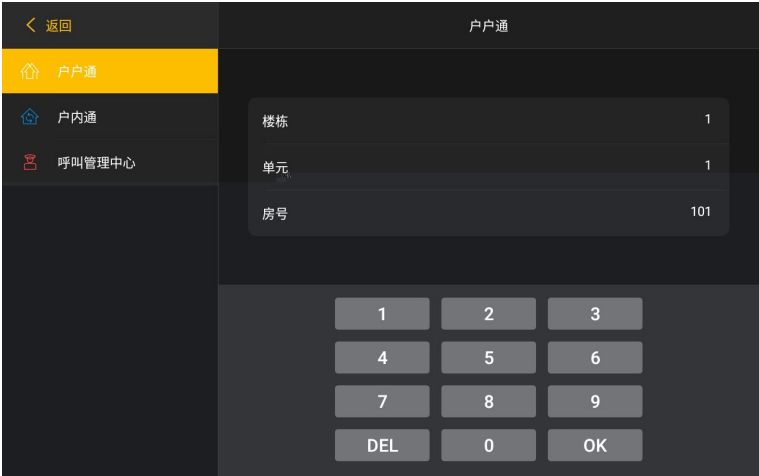

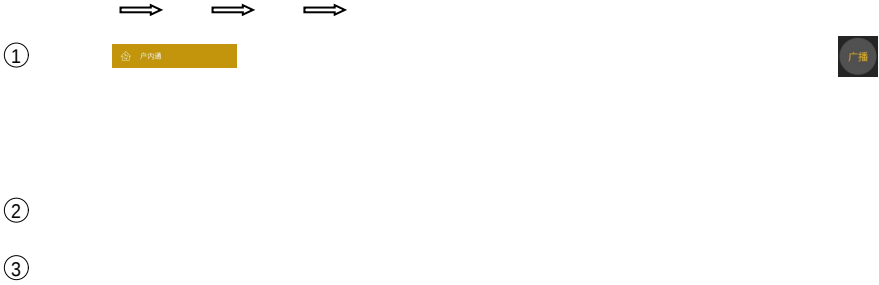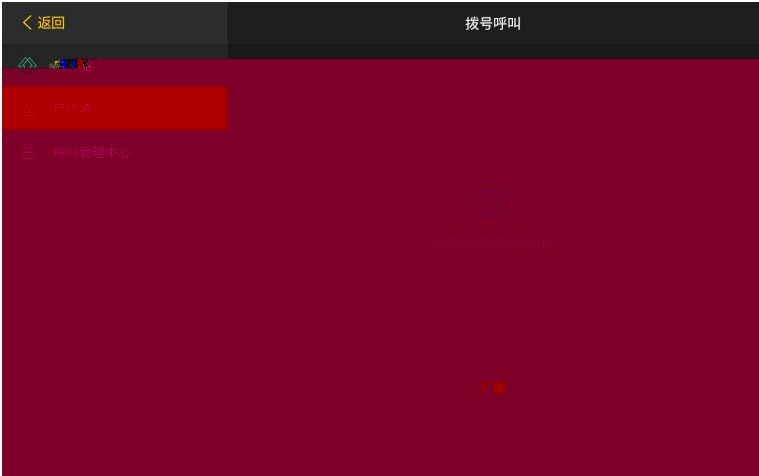

3.2.2



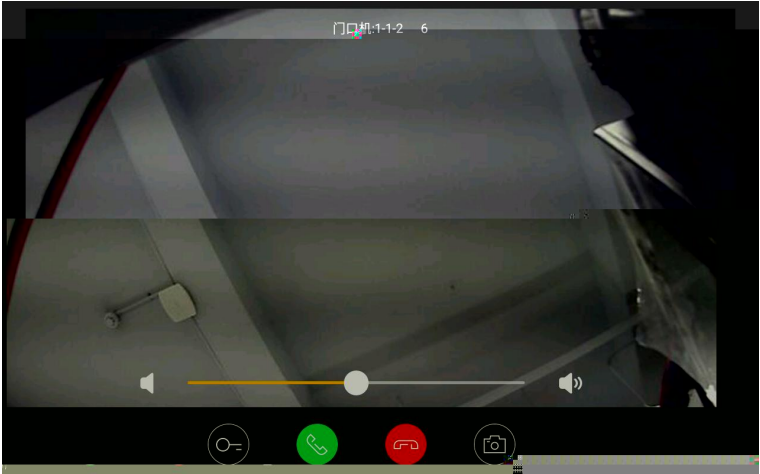

①

②



③



④





①



②

3.2.3



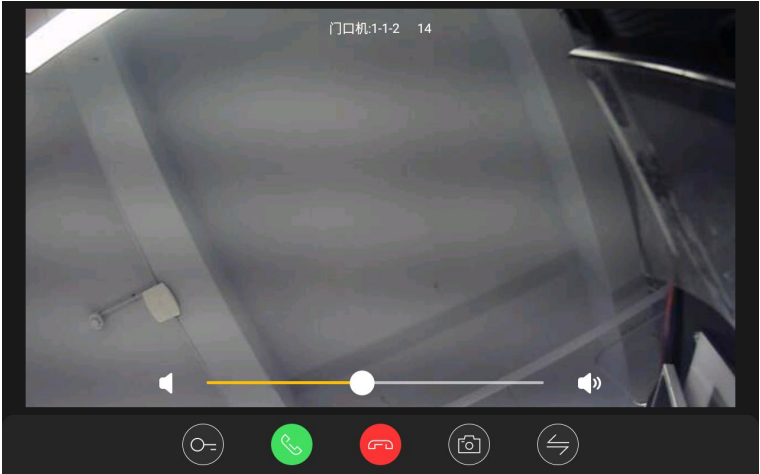

①



②



③





< 返回

添加摄像头

+ 添加摄像头

摄像头列表

监控时长设置

摄像头名字rtsp

摄像头rtsp地址rtsp://10.0.226.13:554/profile2

添加

TF卡导入配置文件



3.2.4



< 返回

信息

广播

2020-05-09

广播呼入，请尽快查看信息！

室内机 1

2019-08-14

室内机 1 来信息了，请尽快查看信息！

广播 2

2019-07-16

广播有信息呼入，请尽快查看信息！

室内机 102

2019-05-09

室内机 102 来信息了，请尽快查看信息！

小门口机

2019-04-14

小门口机来信息了，请尽快查看信息！

广播



尊敬的业主（住户）朋友：


您好！由于管道维修，本小区将于2020年2月16日10:00~18:00停水8小时，请大家提前做好储水准备。

3.2.5



3.2.6



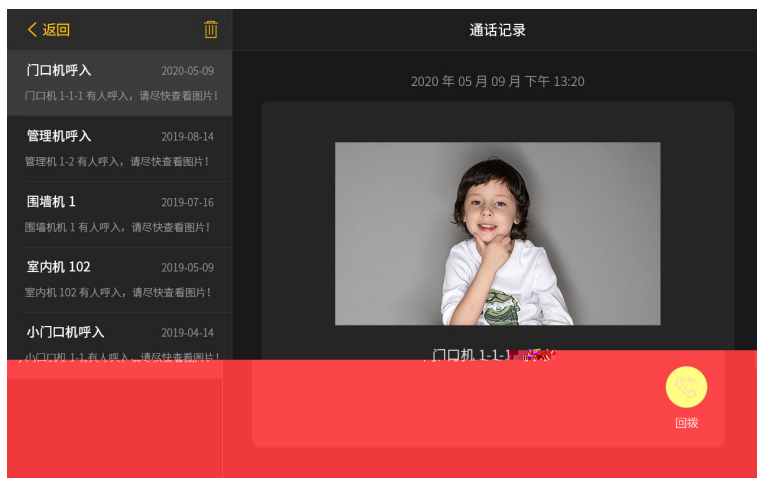

3.2.7



3.2.8




3.2.9




< 返回		报警信息		
布撤防 报警信息	编号 18	振动	24 小时即报	2020-05-09 12:30:56
	编号 15	门铃	交叉报警	2020-05-08 12:30:56
	编号 12	手报按钮	传递延迟	2020-05-07 12:30:56
	编号 3	红外	交叉报警	2020-05-05 12:30:56
	编号 2	烟雾	24 小时即报	2020-05-09 12:30:56
	编号 9	其他	传递延迟	2020-05-04 12:30:56
	编号 6	瓦斯	24 小时即报	2020-05-04 12:30:56
	编号 1	气压	24 小时即报	2020-05-02 12:30:56
	编号 8	红外	立即报警	2020-05-01 12:30:56

3.2.10

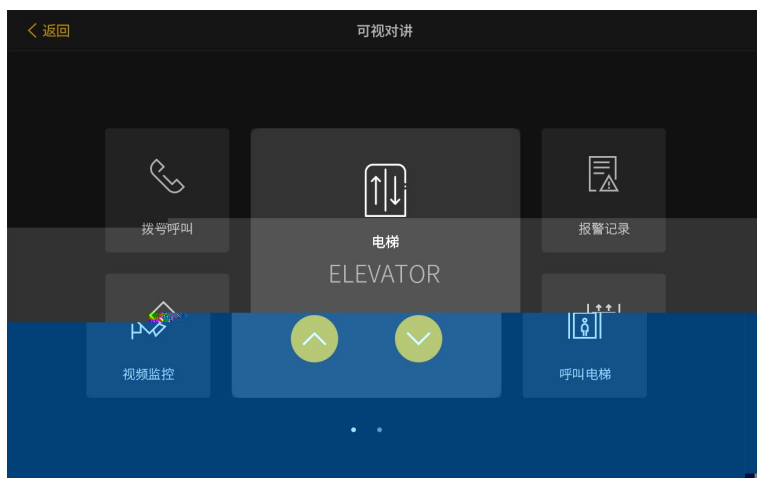


3.2.11

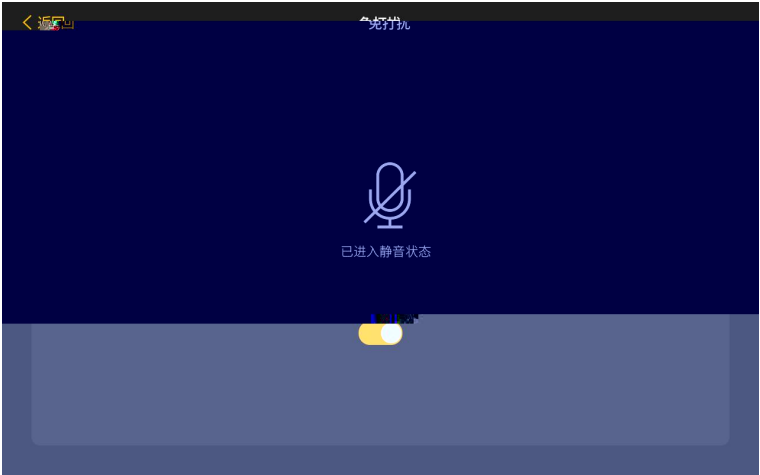

3.2.12



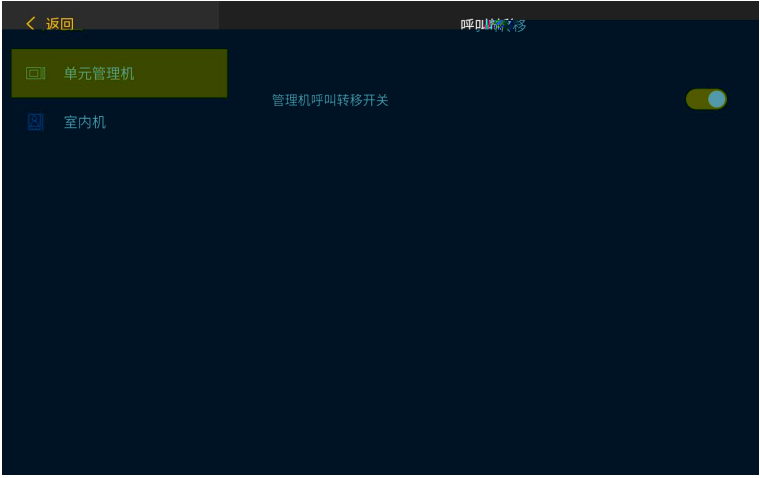

3.3




3.3.1





3.3.2



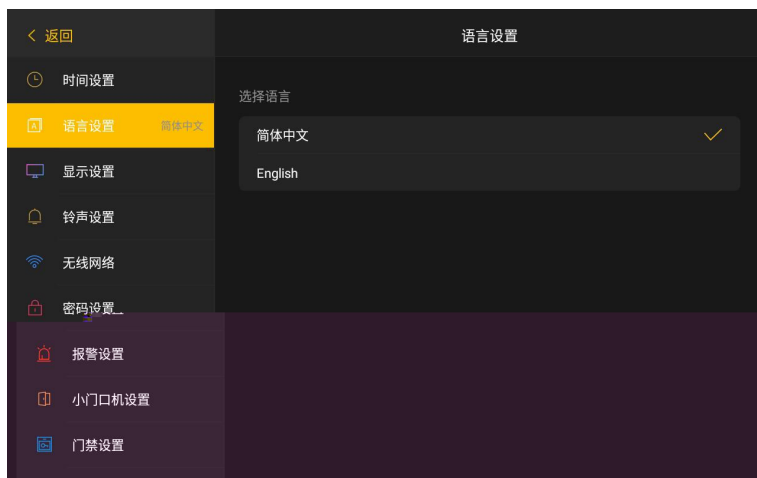


3.3.3

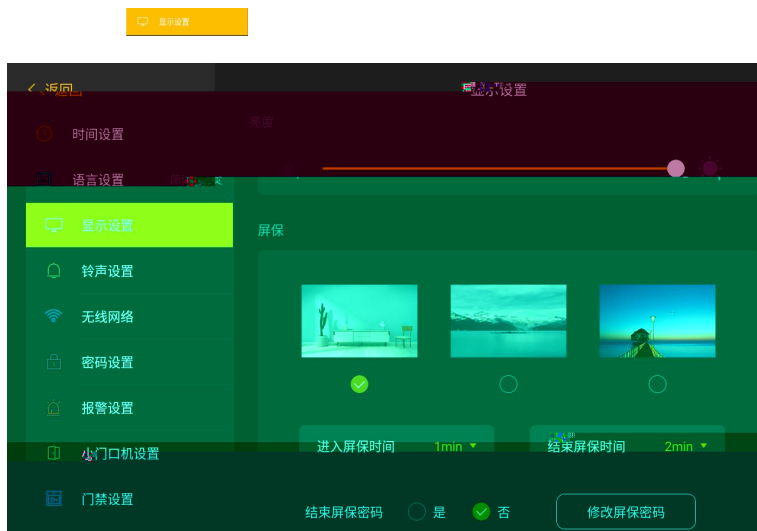


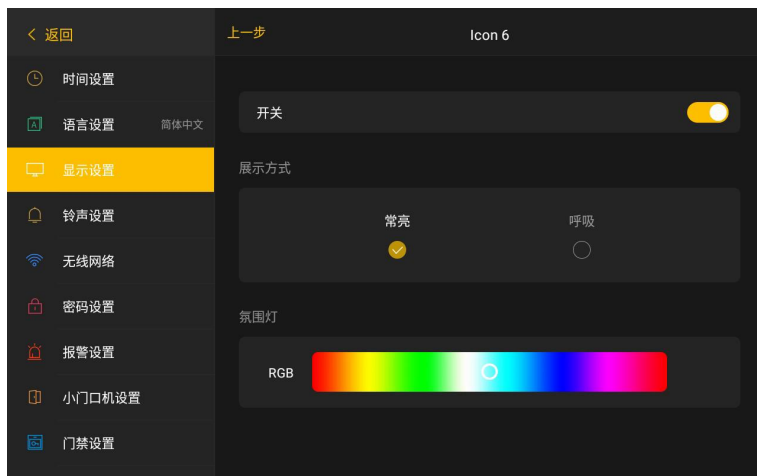

3.3.4

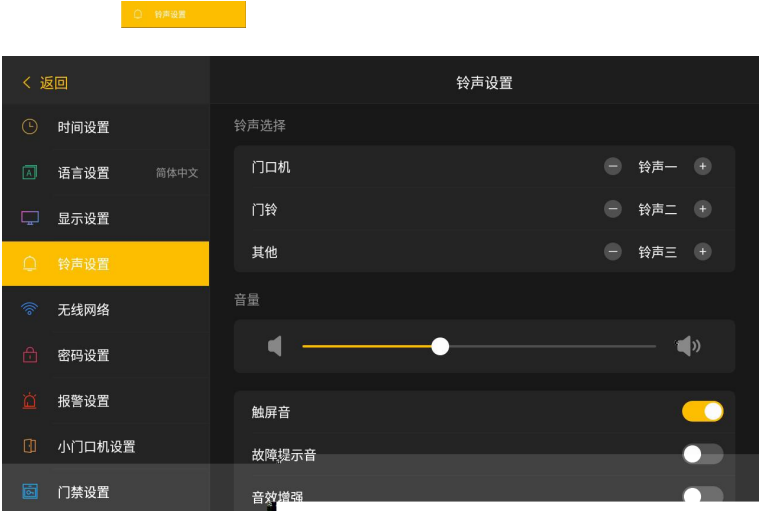



3.3.5

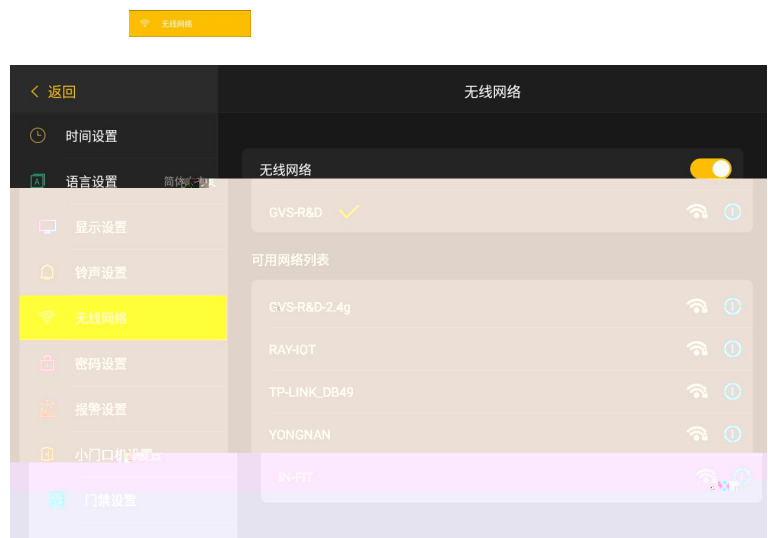

3.3.6



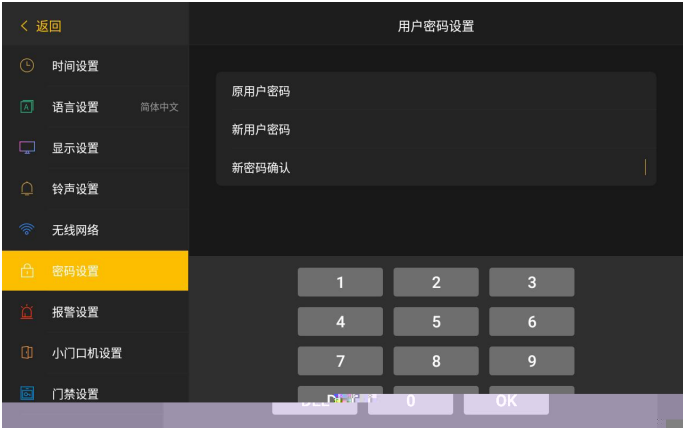


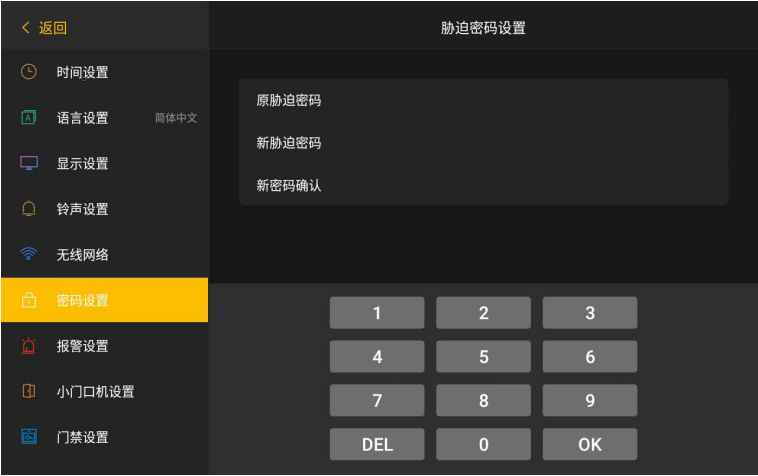

3.3.7




3.3.8

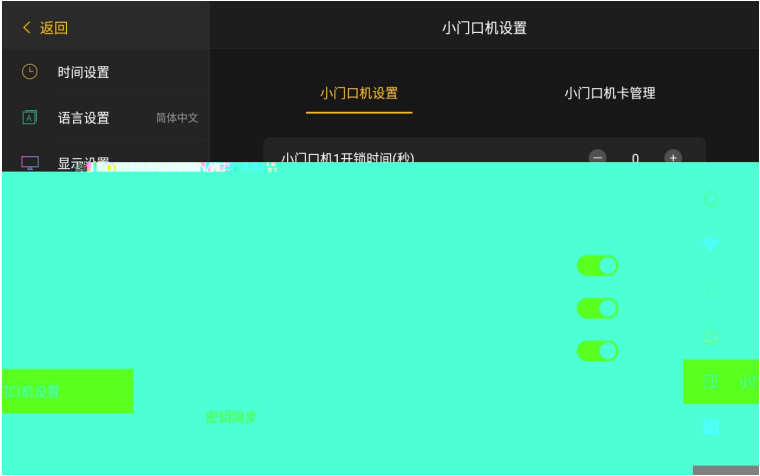




3.3.9

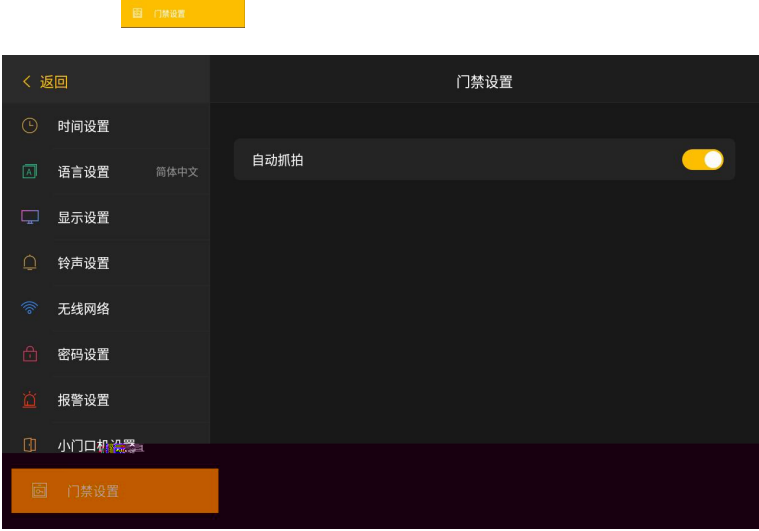

3.3.10

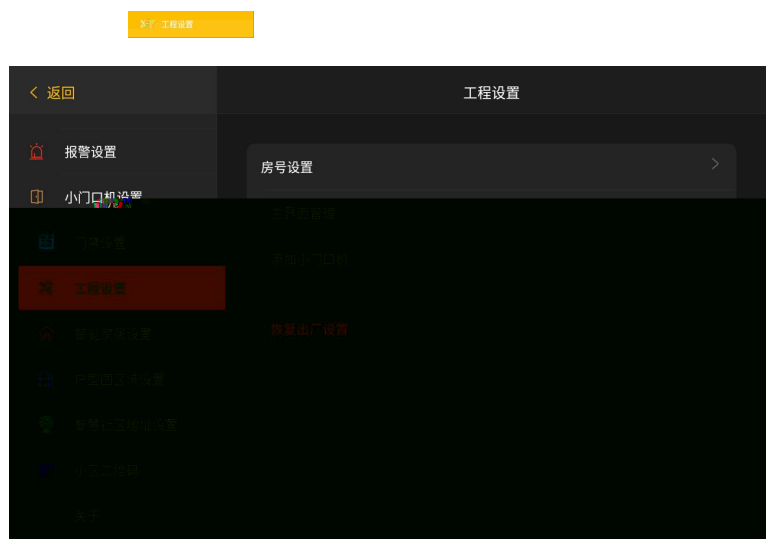

3.3.11





3.3.12




“

”



3.3.13

添加小门口机

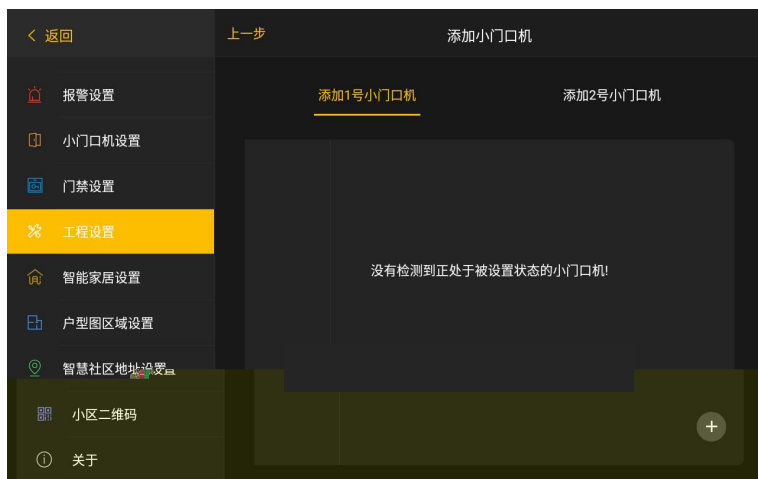

“

”

“

”

“

”


3.3.14

恢复出厂设置




3.3.15

智慧社区地址设置

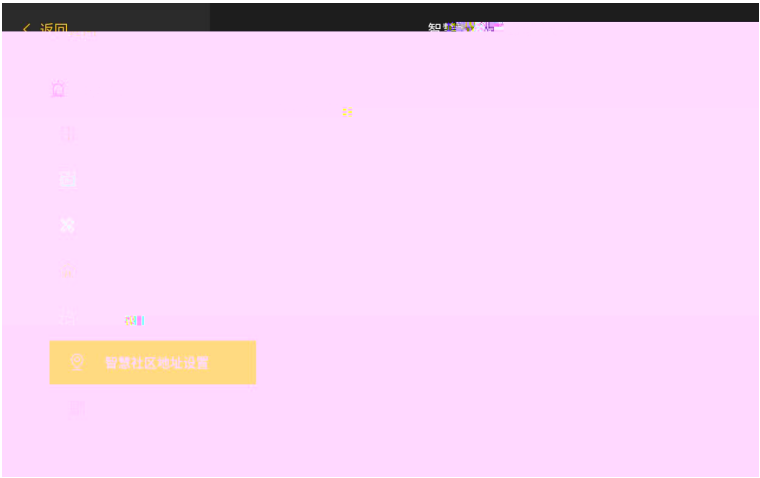

3.3.16




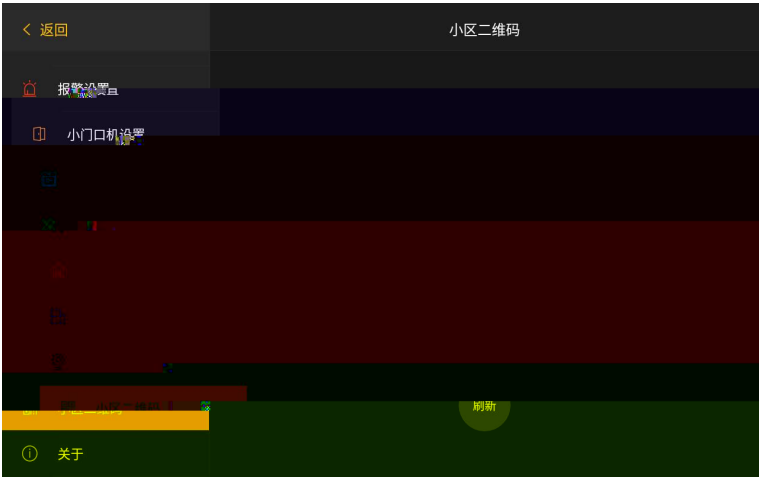

3.3.17




4.1

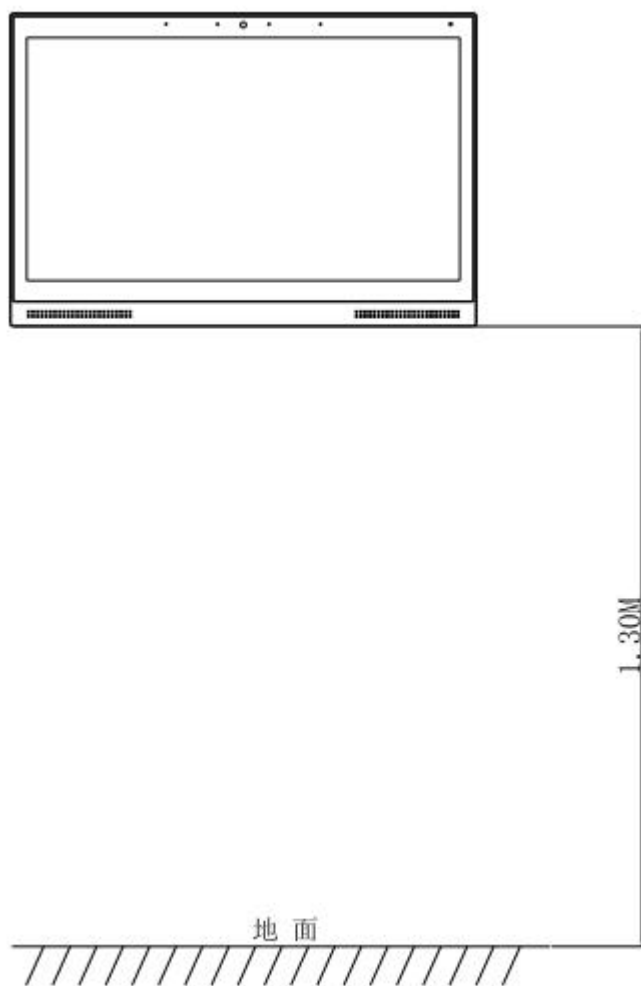

1.3

4.2

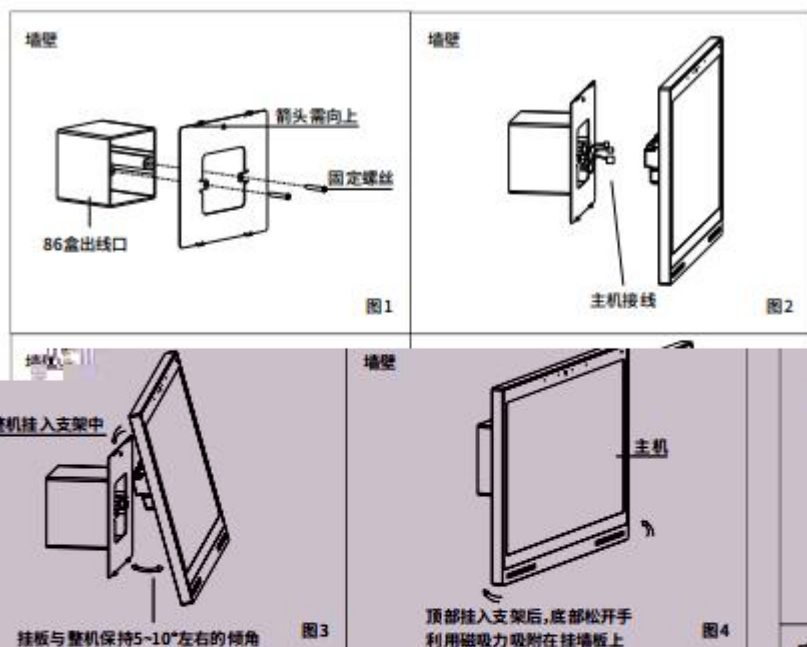

安装步骤:

第一步:取出五金挂板,对齐墙上86盒接口,然后将挂板用附件螺丝固定好在86盒上(如图1所示)。


第二步:取出主机后,将主机的线路接口对接好(如图2所示)。

第三步:将整机上端挂入支架中,挂入过程保持挂板与整机底部有5~10°左右的倾角(如图3所示)。


第四步:顶部挂入支架后,底部松开手利用磁吸力将整机吸附在挂墙板上(如图4所示)。

5.1

5.1.1

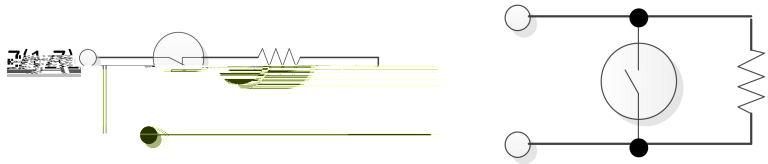

5.1.2

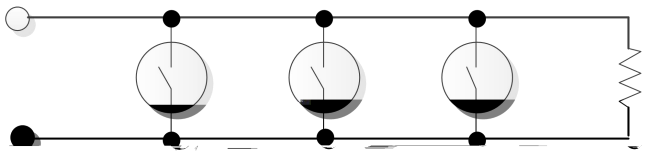

0 @D'_Pø R Â Ð @

5.3

